




EQUATORIAL AUDIO

Isolation Foot Height Checker

Polar Pods: precisely 152.4mm • Tolerance: $\pm 0.1\text{mm}$

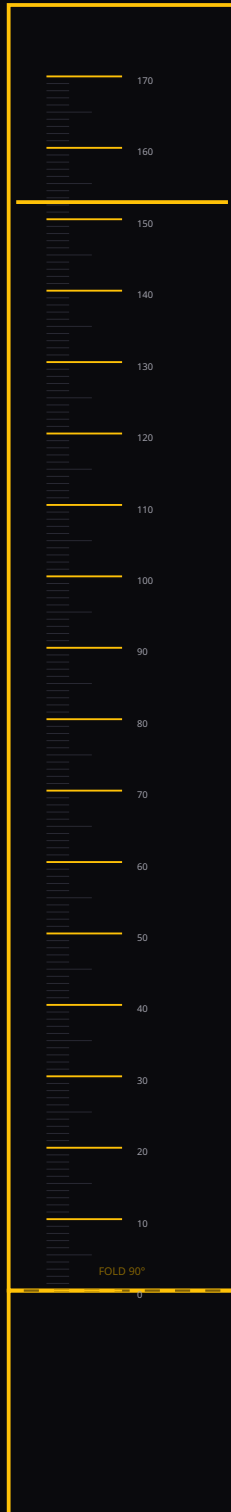

152.4mm (6")
 $\pm 0.1\text{mm}$

How to use:

1. Cut along solid gold lines
2. Fold base 90° outward at dashed line
3. Place L-shape upright against Polar Pod
4. Gold reference line should align with pod top
5. If misaligned, contact support for warranty claim